


GAZELLE


G9701 Firmware Release Notes:

Ver: 2.0.0 | Release: 2022-10-01

Additionally generate a visible image when capturing. Select Radiometric images in Settings -> Capture Settings -> Picture Type. Enable the option Save Optical Picture to additionally generate a visible image of JPEG format.

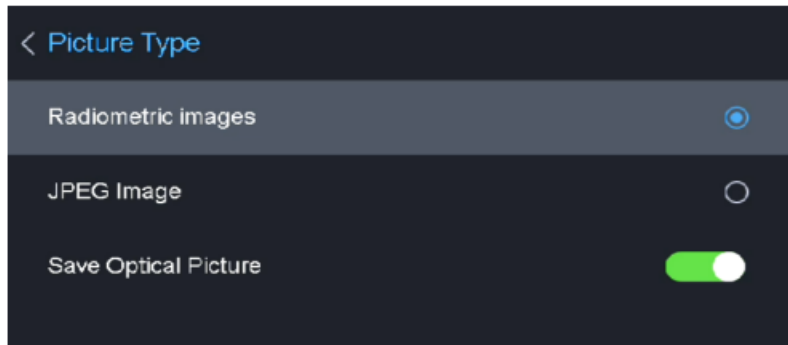

The visible image would be viewable in M series camera itself.

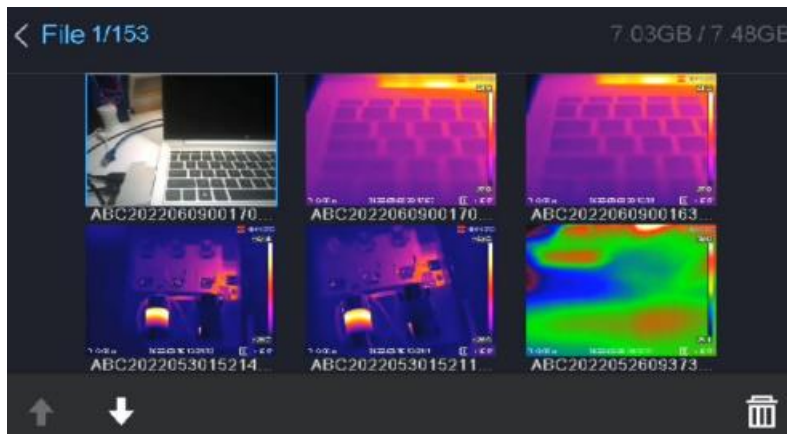

G9701 Firmware Upgrade Instruction:

Step 1:

Download the Version 2 firmware version in this link. [Ver: 2.0.0 | Release: 2022-10-01](#).

Connect the camera and your PC by USB cable.

Step 2:


Start up the camera, and you can see the camera's storage on your PC.

Step 3:

Copy and paste the downloaded firmware “**digicap.dav**” file into the root path of the storage of the camera.

Step 4:

Shut down and start up the camera again. The camera will show "upgrading". When the upgrading is succeeded, restart the camera again and then it's done

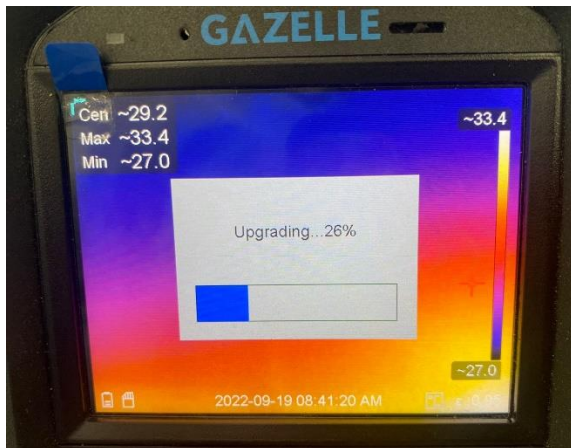**Step 5:**

Verify the firmware upgrade. Power on the camera, then go to Settings -> Device information.

Model: GAZELLE G9701

Version: V5.5.19 build 220921